


# Compressor Cigar Humidor

## Operating Instruction

MODEL: TH-JCC- 43

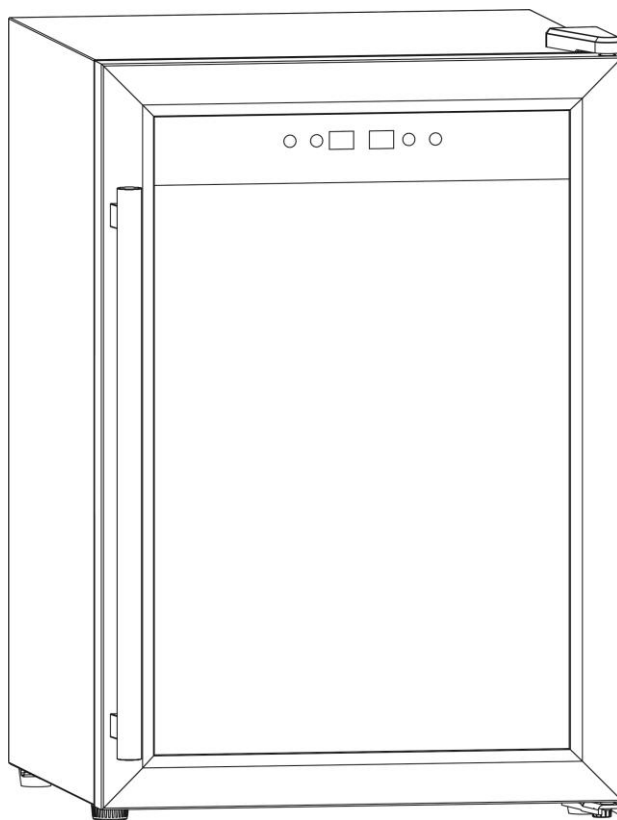

BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTION.

## IMPORTANT SAFETY INSTRUCTIONS



To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:

·Before using the appliance, please read this user manual to ensure that you gain the maximum benefit from it.

### WARNING:

- 1) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2) Children should be supervised to ensure that they do not play with the appliance.
- 3) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 4) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 5) To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- 6) When positioning the appliance, ensure the supply cord is not trapped or damaged.
- 7) Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- 8) Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- 9) Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- 10) Do not damage the refrigerant circuit.
- 11) Do not use electrical appliances inside the drink storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- 12) Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- 13) This appliance is intended to be used in household and similar applications such as
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses and by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments;
  - catering and similar non-retail applications.
- 14) Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- 15) To avoid contamination of drink, please respect the following instructions:
  - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
  - Clean regularly surfaces that can come in contact with drink and accessible drainage systems.
  - Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days.
  - If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

·Note: This appliance contains flammable refrigerant R600a and foaming agent cyclopentane.

Please avoid contact fire when you transport and use it.

Please ask professional for servicing when the machine broke down. Please send it to your local appointed disposal station when you discard it.

-Save these instructions-



During using, service and disposal the appliance, please pay attention to symbol similar as left side, which is located on rear of appliance (rear panel or compressor) and with yellow or orange color.


It's risk of fire warning symbol. There are flammable materials in refrigerant pipes and compressor.

Please be far away fire source during using, service and disposal.

## INSTALLATION INSTRUCTIONS

- This appliance is designed to be free standing only, and should not be recessed or built-in.
- Place your unit on a floor that is strong enough to support the unit when it is fully loaded. To level your unit, adjust the leveling legs at the bottom of the unit.
- This appliance is not designed to be installed inside of a cabinet where the front is covered by any type of door.
- Allow 10 cm of space between the top, the back and sides of the wine unit, which allows the proper air circulation to cool the compressor and condenser.
- Locate the unit away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the unit in moist areas.
- Plug the unit into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized Products service center.
- After plugging the Wine Chiller into a wall outlet, allow the unit to cool down for 2-3 hours before placing any items in the compartment.

## PARTS AND FEATURES

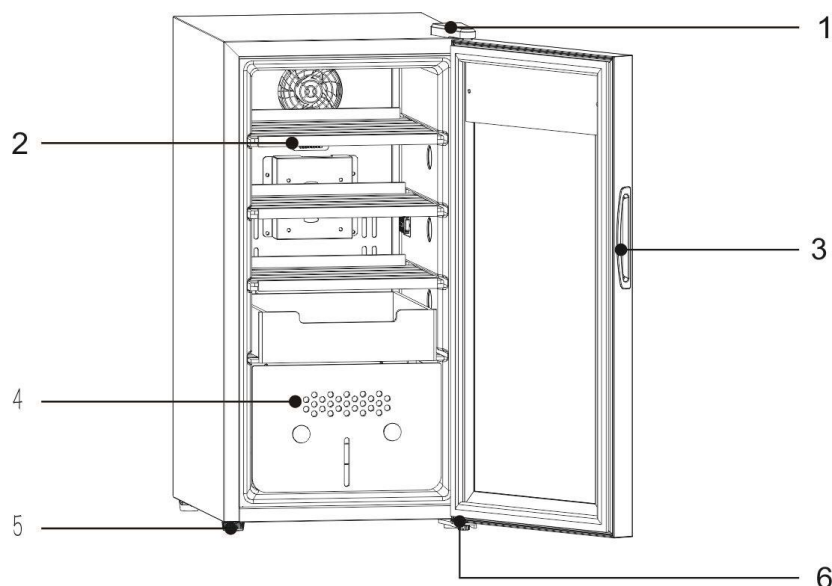


1: Upper Hinge  
2: Shelves  
3: Door Handle

4: Cistern  
5: Adjust Foot  
6: Bottom Hinge

# OPERATING YOUR UNIT

## Setting the Temperature Control

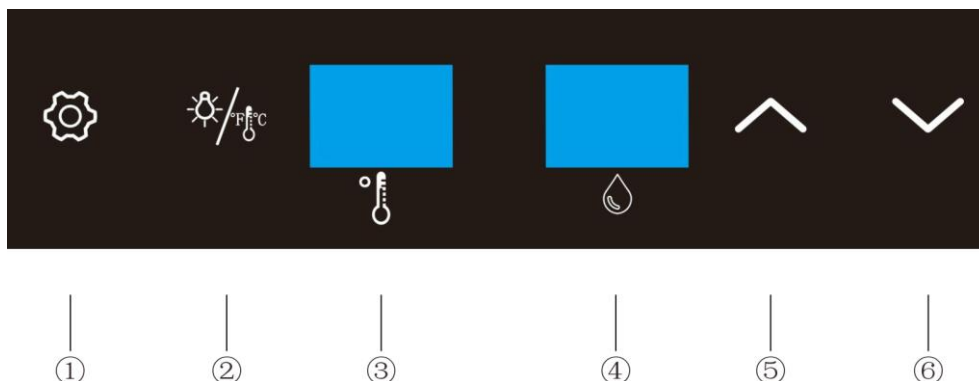

### Key function

- ① Unlock key : short press to switch temperature or humidity setting state; long press for 2 seconds to unlock
- ② Light / CF key : short press to turn on or off the light; long press for 2 seconds to switch Fahrenheit or centigrade
- ③ Temperature display window
- ④ Humidity display window
- ⑤ Increase key: each time to press to increase the temperature / humidity by 1 degree
- ⑥ Decrease key: each time to press to decrease the temperature / humidity by 1 degree

### Automatic lock function

When all the key no operation for **20** seconds, the key will be locked automatically. After locking, the Increase key and Decrease key cannot be operated. The unlock key and light / CF key operate normally

### Automatic light off function

When all the key no operation for 10 minutes, the lamp will turn off automatically

### Adjustable range

Temperature :

Minimum : 16 ° C / 61 ° F

Maximum : 22 ° C / 71 ° F

Humidity :

Minimum : 65%

Maximum : 75%

### Display range

Temperature display range of control board: 0 ~ 37 ° C / 32 ~ 99 ° F

Humidity display range of control panel: 10% - 95%

### Error code

“EE” : when the temperature probe is short circuited or open circuited, "EE" will be displayed, and the refrigeration will stop


“LL” : when the temperature measured by the temperature probe is lower than 0 ° C, it will display "LL", flicker and stop refrigeration

“HH” : when the temperature measured by the temperature probe is higher than 37 ° C, it will display "HH", flicker and stop refrigeration

### Memory function


When the control board is powered on again after each power failure, the temperature setting value and Fahrenheit / centigrade state will be the same as before, and the power-off time is not limited

## Description of water tank

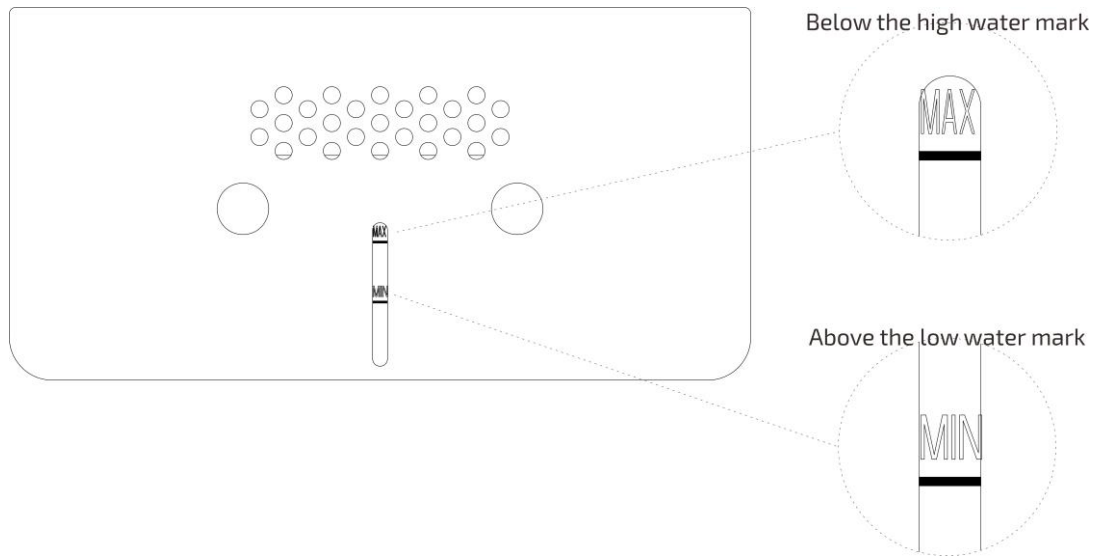

- 1) The function of the water tank is to provide necessary conditions for the controllable humidity of the cigar cabinet
- 2) The water tank should be filled with distilled water instead of ordinary water.
- 3) The water level of the water tank should be between the "highest line" and "lowest line".
- 4) There is an paper cooling pad in the water tank.
- 5) Check the water level regularly, if it is lower than the lowest water level, you need to refill the water.

## WIRING DIAGRAM

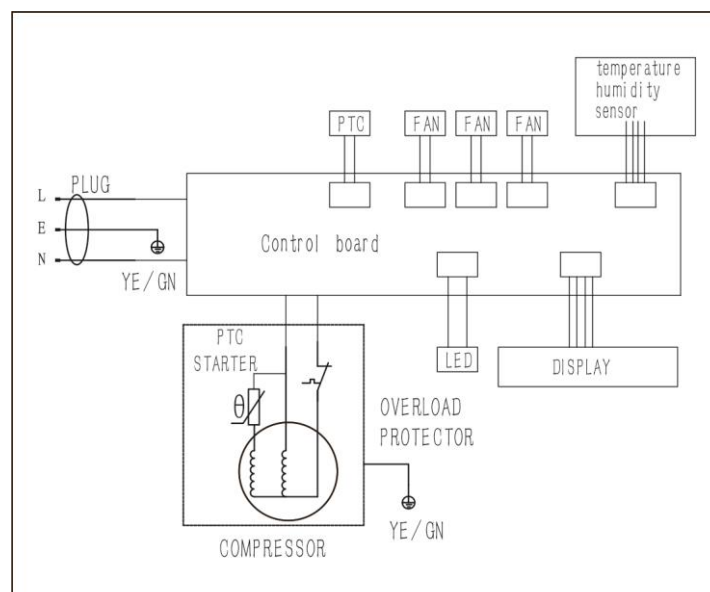

## GENERAL FAULT DESCRIPTION

If the product is not working properly, please check and handle according to the following methods. If the situation can not be changed, please contact the local after-sales service center in time, and be sure to provide the model name and product number in detail.

### The refrigerator doesn't work



Is the power on?




Is the power supply voltage too low?

### It's noisy



Whether the ground is flat and whether the product is placed stably

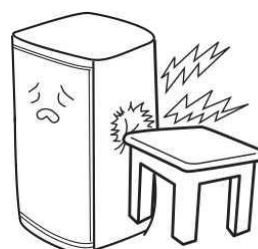


Is the product in contact with external objects or walls


### The internal temperature is not low



Improper setting temperature, please select the appropriate temperature

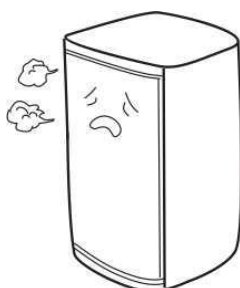

The door is not closed tightly or opened frequently, and the opening time is too long

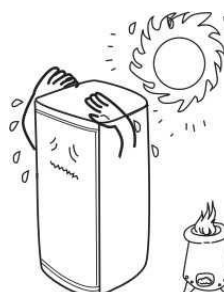

Is the location exposed to direct sunlight or too close to the furnace and other heat sources



Poor heat dissipation, please check whether there is enough cooling space around the product

## Correct disposal of this product



This symbol on the product, or in its packaging, indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.